 


PLAYING WITH CERTABO BOARD ON CHESS.COM

 
Please read these brief instructions before playing.

Preliminary setup 1-2-3-4

- Be sure you have already installed main Certabo software and you have done the initial setup of pieces and spares queens. The Certabo online gaming system will automatically use this setup.
- Go on Chess.com go to setting and set as language English as **“Language”** and My Language Only as **“Content Language”**

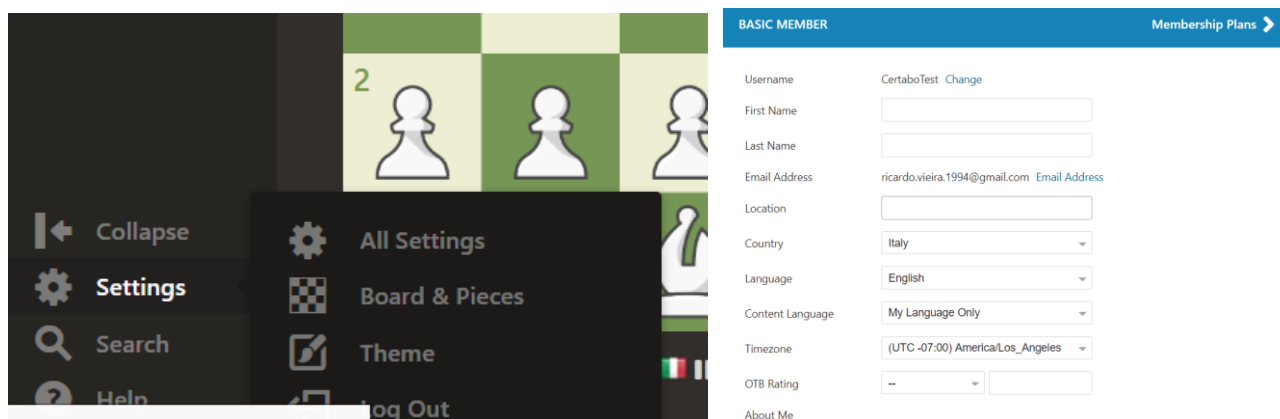

- For promotion, we suggest to go in setting live chess and enable **“Always Promote to Queen”** so if you are going to promotion, just remove the pawn from chessboard and place the queen in 8th position.

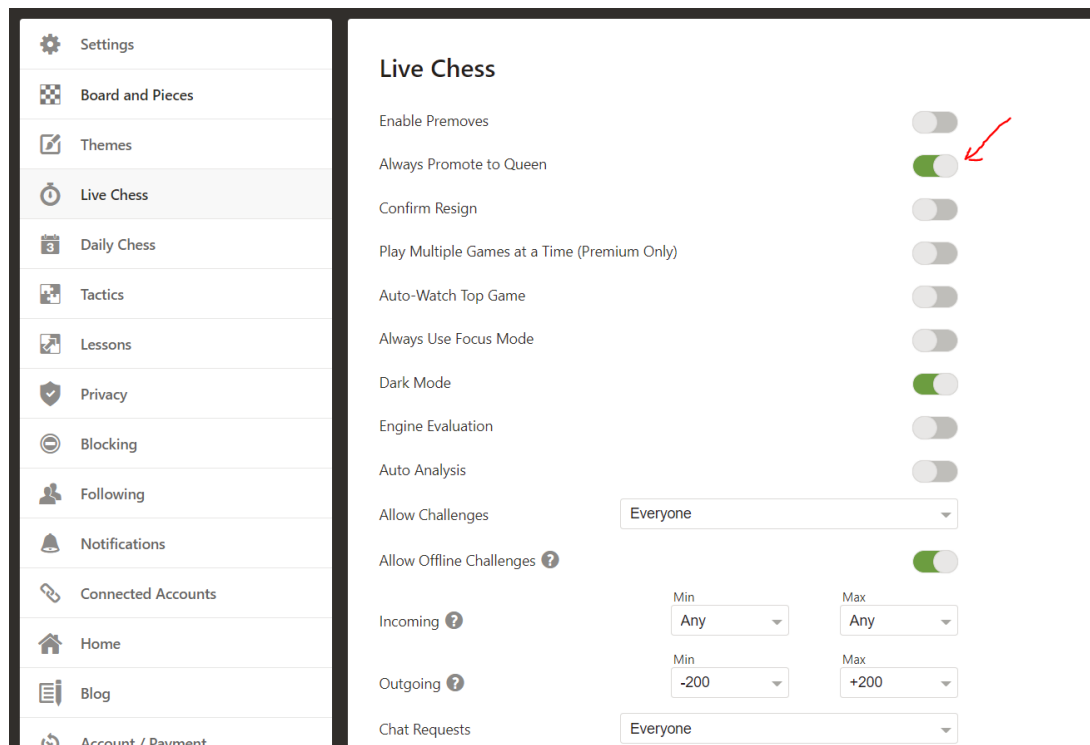


*INVENTHIO Srl explicitly disclaims all responsibility for any malfunctioning of the game, graphical interface or pieces recognition failures of the chessboard used with version of software different from the official ones. Official version of Certabo® software are exclusively available and distributed on www.certabo.com.

Certabo® is a registered trademark of Inventhio Srl –Italy




 - Place the white always on bottom side of Certabo board either you are playing with white or with the black. If you play with black you may need to rotate the board at this time. Please be sure to go in Setting/Board and Pieces and double check **White always on the bottom** is turned off and that **Show legal moves** is instead turned on!

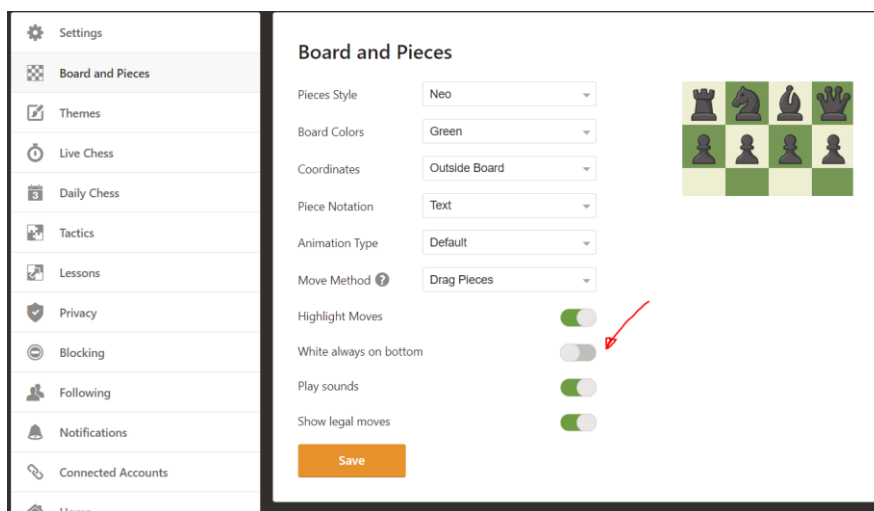


USE OF THE SOFTWARE

 
- Start the software and click on Login credential you can save your credentials for automatic access to your account for all websites. Select your preferred browser and click on chess.com. Please be sure you have installed Firefox and/or Chrome.

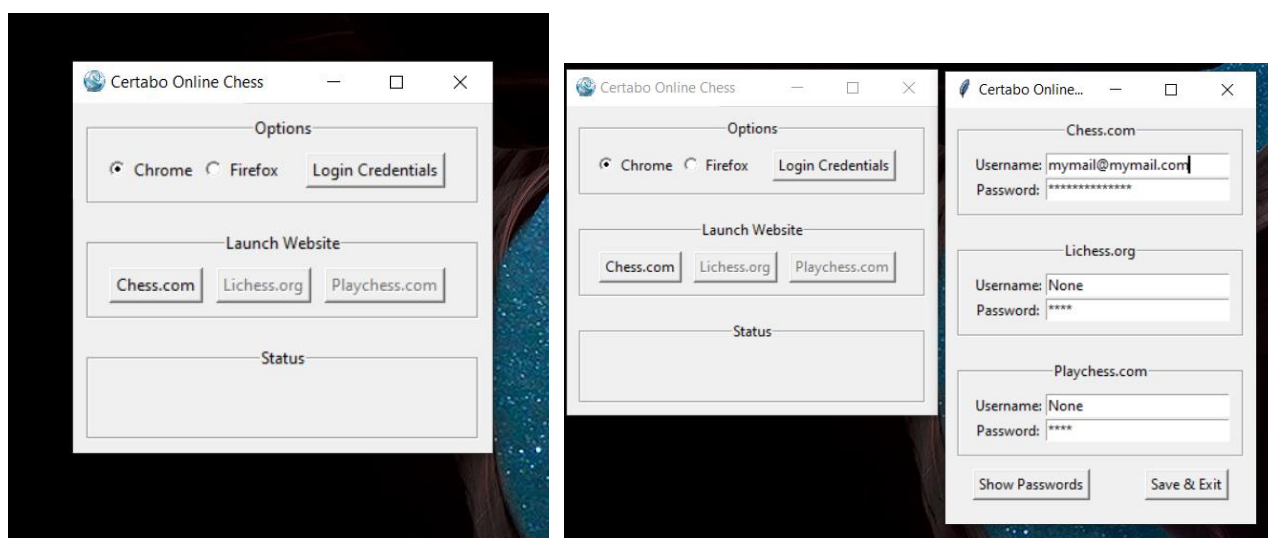


 
- Select game option as usual and press play

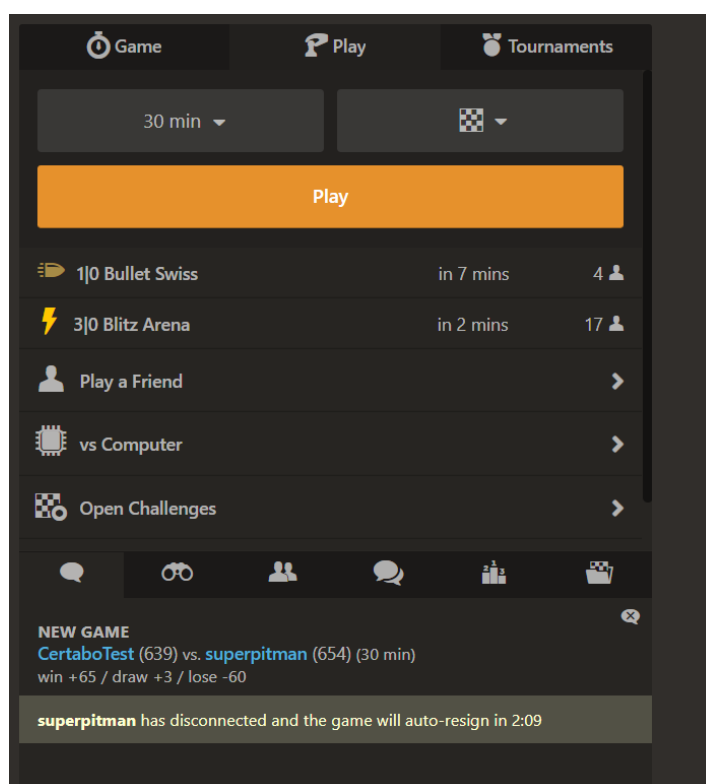

 
- Have a look at Certabo banner if a piece is offset or missing you will be told to reset initial position. If also during the game you drop a piece or misplace one you will be also be told by banner Fix Position. In both cases the column A and H of your Certabo board will automatically light up to attract your attention on that.

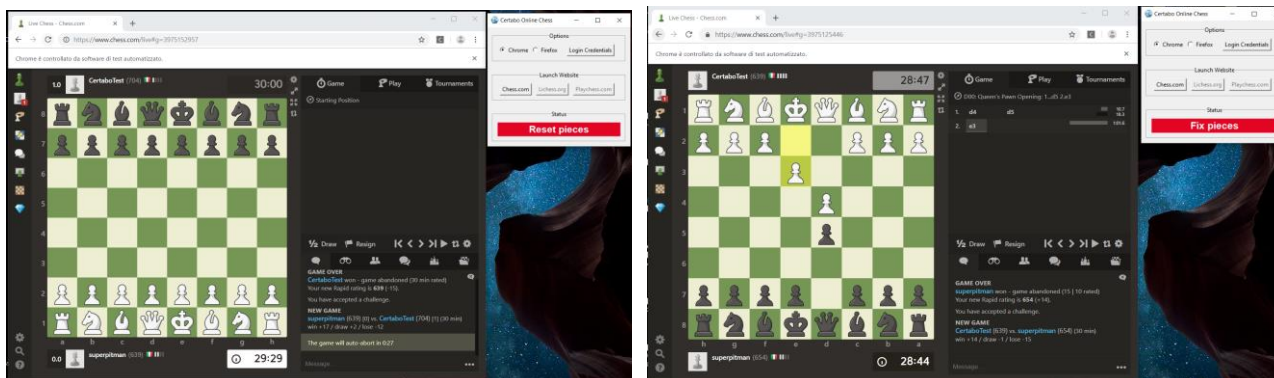

  - Start playing the banner will tell if it's your turn to move if it's waiting for opponent or if you need to replicate your opponent move on Certabo board once done. Source and Target square leds will light up to show you opponent move. **You do not really need to look at banner.**

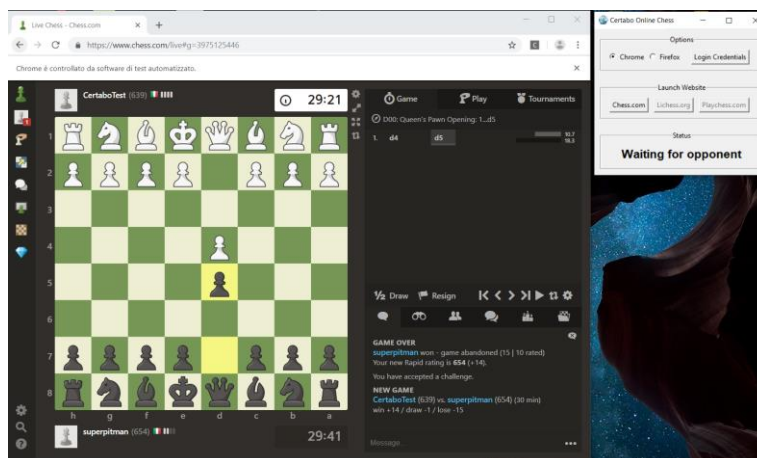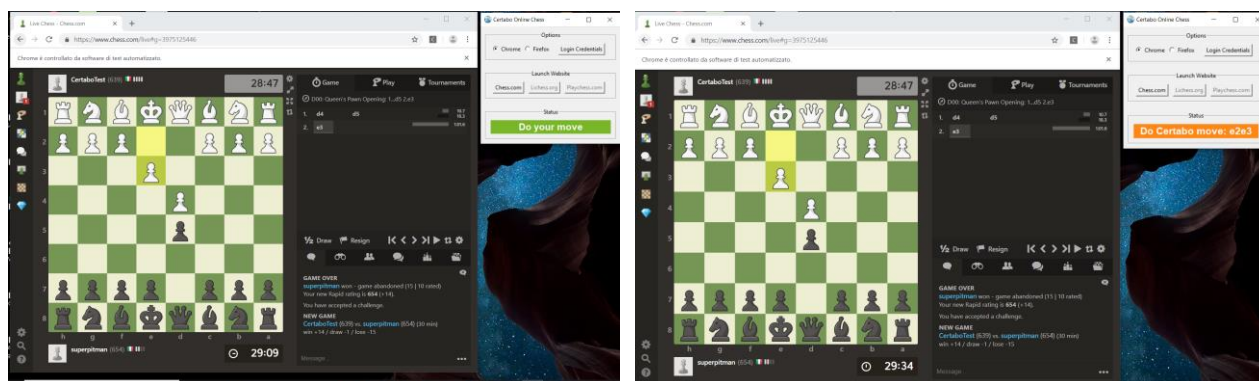

 - During the game be sure the game tab is always selected

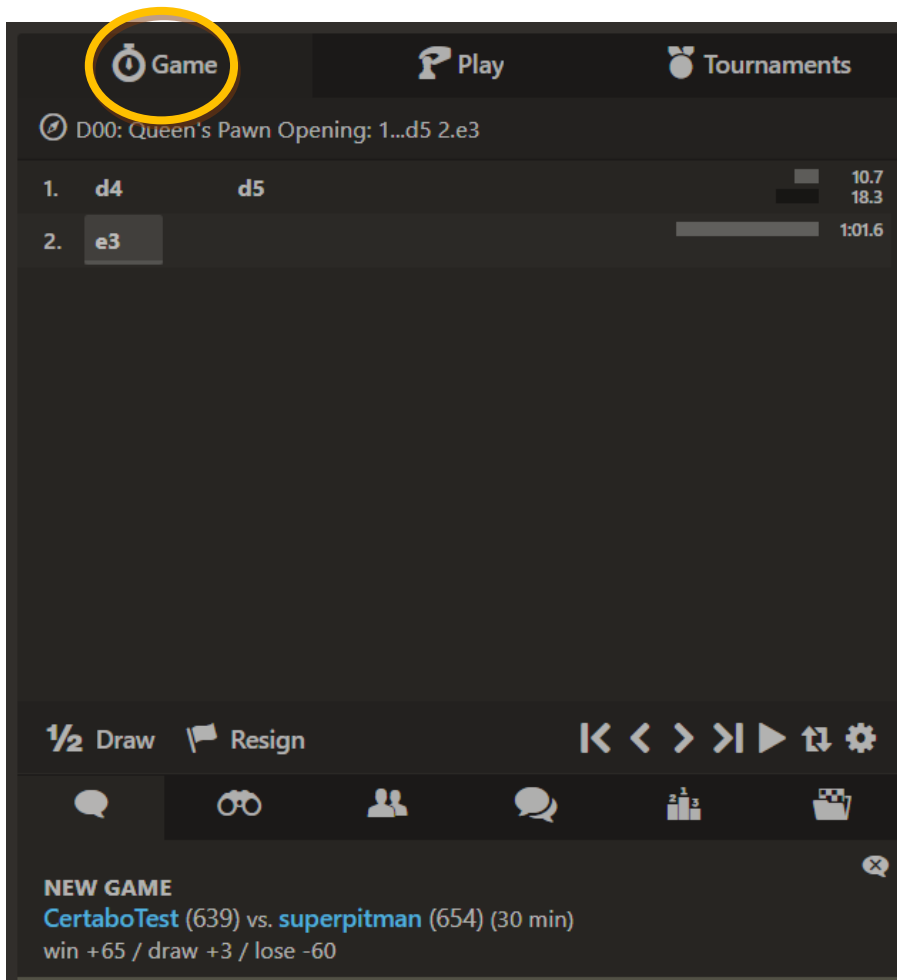


- If the usb cable is disconnected from board at anytime, just plug it in again the Certabo board will be automatically synchronized again and game will continue.

PLAYING WITH CERTABO BOARD ON LICHESS.ORG


Please read these brief instructions before playing.

Preliminary setup 1-2

 - Be sure you have already installed main Certabo software and you have done the initial setup of pieces and spares queens. The Certabo online gaming system will automatically use this setup.
- Go on Lichess.org and open preferences

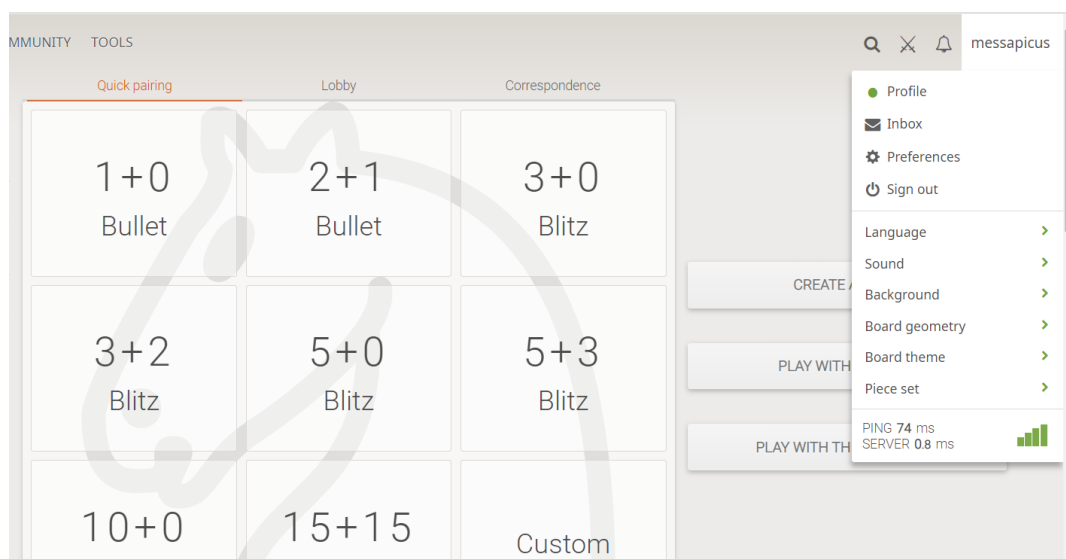

 Go to game behaviour tab and make sure **“ Input moves with keyboard is activated”**

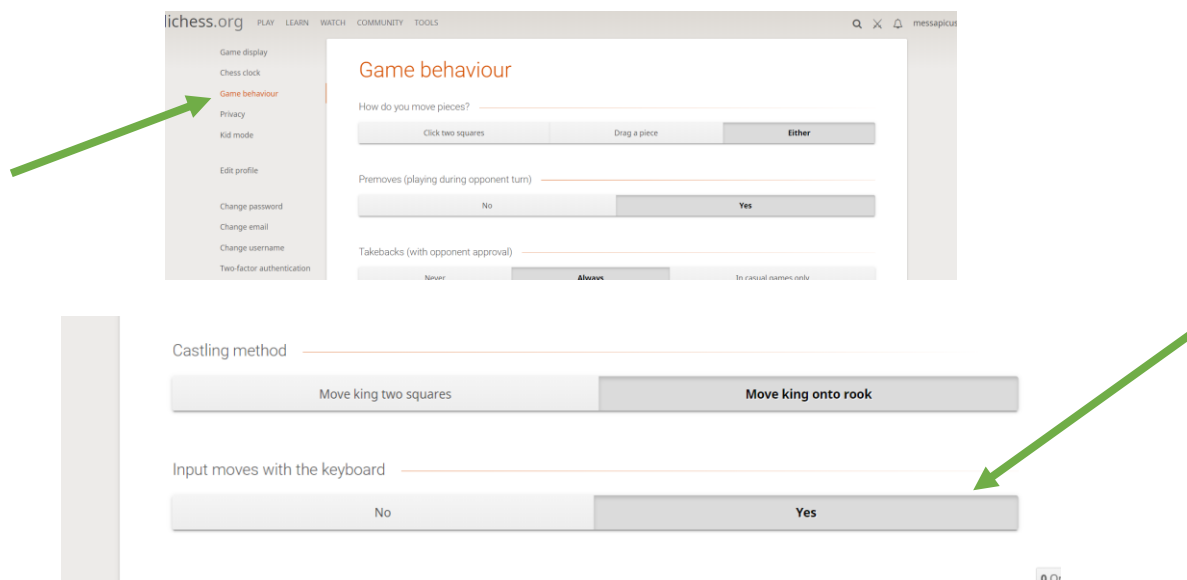

*INVENTHIO Srl explicitly disclaims all responsibility for any malfunctioning of the game, graphical interface or pieces recognition failures of the chessboard used with version of software different from the official ones. Official version of Certabo® software are exclusively available and distributed on www.certabo.com.

Certabo® is a registered trademark of Inventhio Srl -Italy



- For promotion, we suggest in the same tab to set for **“Promote to Queen automatically” Never or Always** if you select always when you go to promotion just remove the pawn from chessboard and put the queen on 8th position, if you select never just remove the pawn and put any preferred piece it will be promoted automatically to that..

Removes (playing during opponent turn)

No	Yes
----	------------

Takebacks (with opponent approval)

Never	Always	In casual games only
-------	---------------	----------------------

Promote to Queen automatically

Never	When removing	Always
--------------	---------------	--------

Claim draw on threefold repetition automatically

Never	Always	When time remaining < 30 seconds
-------	--------	--

Move confirmation

ENJOY!!